

HYCO MANUFACTURING LTD
FAN HEATER FH-201

Please read and understand these instructions before commencing installation and leave them with the user when installation is complete.

1. SAFETY

1. This appliance meets the electromagnetic compatibility requirements specified in EN55104/95 with regard to interference with radio and TV sets.
2. Only connect the fan heater to a single-phase socket with a mains voltage as specified on the rating plate.
3. Do not use the appliance in rooms less than 4m² area.
4. Do not leave the appliance switched on whilst unattended. Ensure that the switch is in OFF (O) position and the thermostat is set to minimum.
5. Always unplug the appliance when not in use. Do not use the cord to unplug the heater.
6. Keep combustible materials such as furniture, cushions, bedding, paper, clothes, curtains etc at least 100cm away from the fan heater.
7. If wall mounted, do not fix to combustible material such as wooden, synthetic or plastic surfaces.
8. Do not hang anything on or in front of the fan heater.
9. Keep the air inlet and outlet grilles free from objects at least 1m in front and 50cm behind the heater.
10. Do not install the heater directly below a socket.
11. Do not let animals or children touch or play with the fan heater. Please note that the air outlet gets very hot during operation (more than 80°C or 175° F).
12. Do not cover the fan heater. If covered there is a risk of overheating.
13. Do not use the fan heater in the immediate surroundings of a bath, shower or swimming pool.
14. Do not operate the fan heater in explosive atmospheres or whilst using inflammable solvents, varnish or glue.
15. If the cord of this appliance is damaged, discontinue use of this product and contact the manufacturer for further instructions.

2. INSTALLATION

The appliance requires no installation; it should be used solely as a portable appliance. Please note that portable appliances are not suitable for use in a bathroom.

3. OPERATION

Turn the thermostat knob in a clockwise direction until it reaches the maximum setting.

The fan heater has 3 power settings:

Summer service (ventilation only): turn the knob to the fan setting.

Heating at reduced power (1000W): turn the knob to setting I.


Heating at full power (2000W): turn the knob to setting II.

To switch the appliance off, turn the knob to setting O.

REGULATING THE THERMOSTAT:

When the room has reached the desired temperature, turn the thermostat knob in an anti-clockwise direction just until the appliance switches off and not beyond. The temperature will then be regulated and kept at a constant level by the thermostat.

The heater is fitted with a safety device which will switch off the heater in case of accidental overheating (please see safety notes). To reset, disconnect the heater from the power source for a few minutes to allow the unit to cool down. Make sure that any causes of overheating such as obstructions to the grilles are removed and plug the appliance in again.

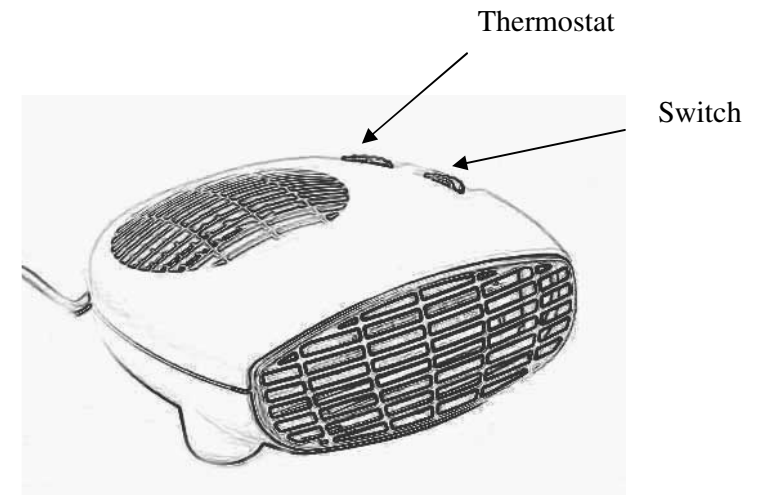

4. GUARANTEE AND SERVICE POLICY

The FH-201 comes complete with a standard 12 month warranty that protects against any manufacturing defects up to 1 year of the original purchase date. In the event of a product failure please contact Hyco on 01977 517555. Incidental or consequential damages are excluded from this warranty.

Hyco Manufacturing Ltd
Units 1 & 2 Calder Works
Methley Road, Castleford
West Yorkshire, WF10 1NX
Tel: 01977 517555 Fax: 01977 517666
Web: www.hyco.co.uk
E-mail: sales@hyco.co.uk



HYCO
Manufacturing Ltd

FH-201 Fan Heater

Instruction Manual

Version 1.0 Aug 2006